



# Modular Gabion Systems

Modular Gabions Systems may be supplied in (A) roll form,

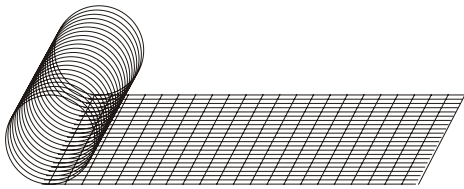


When using roll stock, begin the assembly process at Step 1.

(B) pre-cut panels or

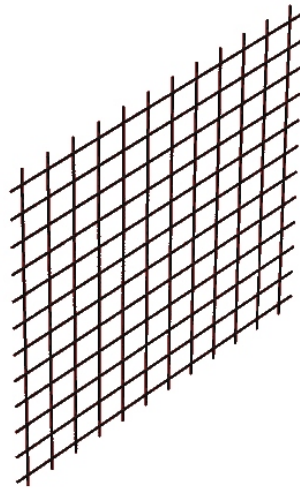


When using pre-cut panels, proceed to Step 2.

(C) partially assembled gabions or mattresses.

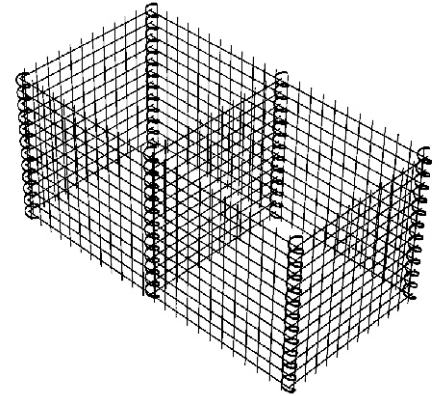


When using pre-assembled gabions, proceed to Step 3.

Panels may be cut to appropriate sizes in the field. When using roll stock, bottoms, lids, fronts and backs may be rolled out in lengths up to 300'.

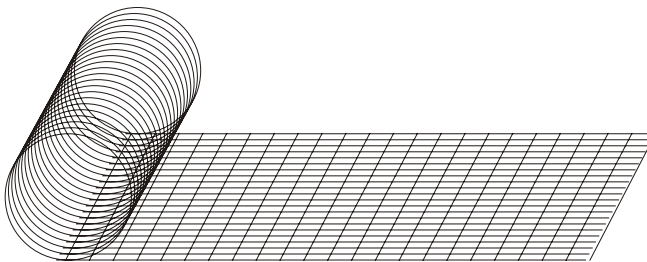

1

Ends, diaphragms, front and back panels are placed upright on the bottom section of wire mesh.

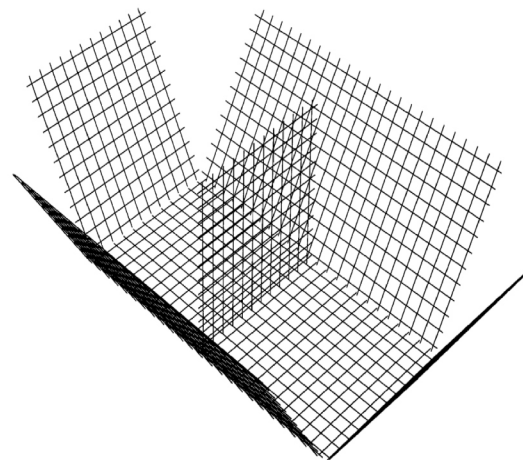

2

## MODULAR GABION SYSTEMS

2221 Canada Dry Street, Houston, Texas 77023 USA


800.324.8282 • 713.924.4371 • 713.924.4381 fax

[www.gabions.net](http://www.gabions.net) • [wire@gabions.net](mailto:wire@gabions.net)

Erosion Control Specialists


# Modular Gabion Systems

Secure panels by screwing spiral binders through the mesh openings in adjacent panels.

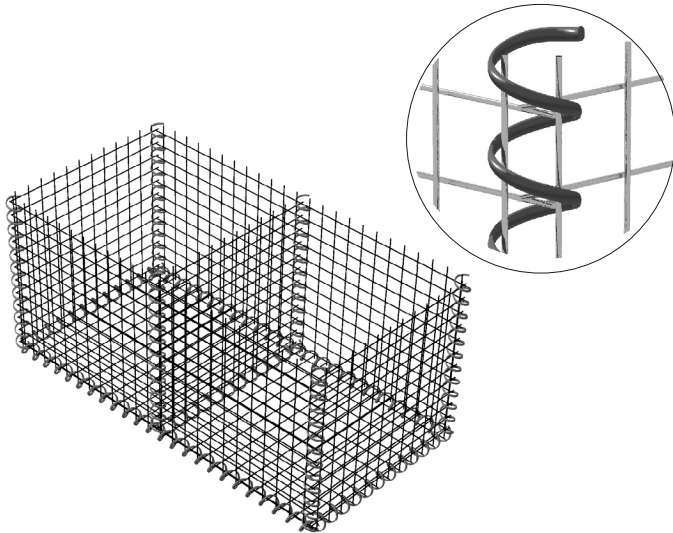


3

18" Stiffeners or lacing wire should be placed inside at 12" intervals (, per VVJWbUfX) and secured over the line UbX'cross wires on the front and side ZUWg"None are needed in interior cells.

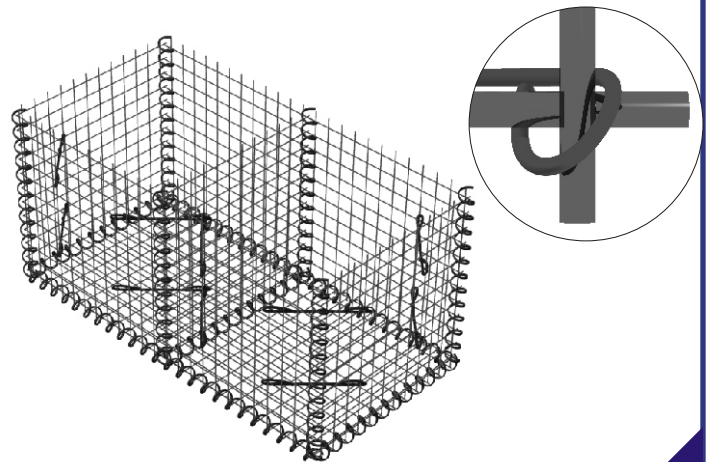


4

Gabions may be filled with graded stone by hand or with a backhoe or loader.

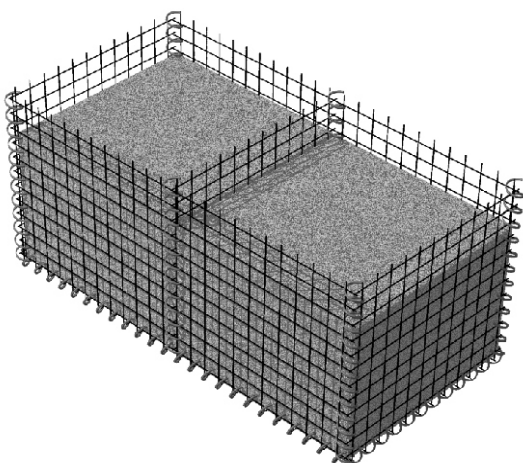

5

After filling, close the lid and secure with spiral binders at the diaphragms, ends, front and back.

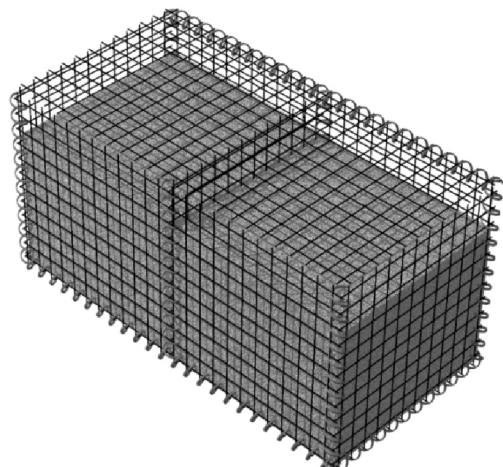

6

All illustrations depict a 3' x 3' x 6' gabion. Gabions constructed from roll stock may utilize continuous sections of welded wire mesh up to 300' long. Please review the instructions on page 3 for options

## MODULAR GABION SYSTEMS

2221 Canada Dry Street, Houston, Texas 77023 USA


800.324.8282 • 713.924.4371 • 713.924.4381 fax

[www.gabions.net](http://www.gabions.net) • [wire@gabions.net](mailto:wire@gabions.net)


Erosion Control Specialists

# Modular Gabion Systems

Redundant panels may be eliminated between gabions as illustrated. An end panel has been removed from the gabion on the right. This gabion will butt up against the gabion on the left so that the end panel of the left gabion becomes a diaphragm between the cells of the two gabions. Spiral connectors will secure all the adjoining panels.

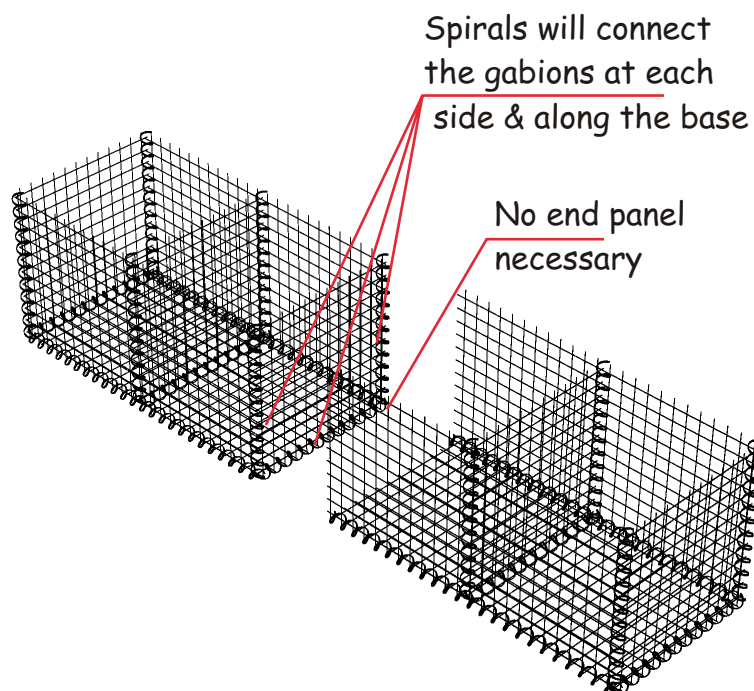

When stacking tiers of gabions (or gabions on mattresses), the lid of the lower tier may serve as the base of the upper tier. Secure with spiral binders and add pre-formed stiffeners to exterior cells before filling with graded stones.

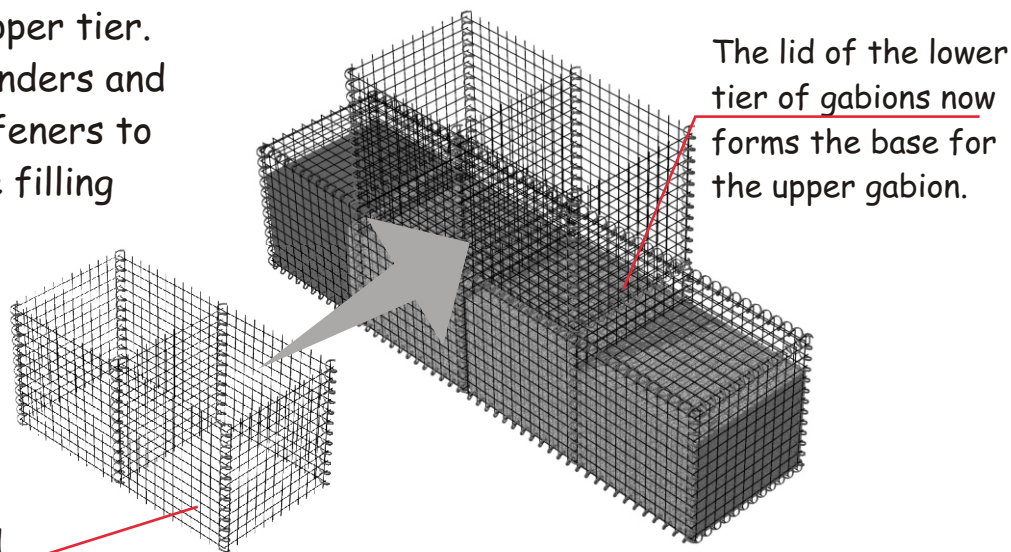

Gabion basket assembled without a base.

All illustrations depict a 3' x 3' x 6' gabion. Gabions constructed from roll stock may utilize continuous sections of welded wire mesh up to 300' long. Please review pages 1 & 2 for basic assembly instructions.

## MODULAR GABION SYSTEMS

2221 Canada Dry Street, Houston, Texas 77023 USA

800.324.8282 • 713.924.4371 • 713.924.4381 fax

[www.gabions.net](http://www.gabions.net) • [wire@gabions.net](mailto:wire@gabions.net)

Erosion Control Specialists